



- | | | | | | | |
|--------------------------|------------------------------|------------------------------|-----------------------------|-----------------------------|--------------------------------|-----------------------|
| 1 BATTERIES | 11 P.D.M.A. SWITCH | 21 L/H DIMMED HEADLIGHT | 31 R/H REVERSING LIGHT | 41 INTERIOR LIGHT | 51 HAZARD WARNING LIGHT | 61 OIL PRESSURE GAUGE |
| 2 SOLENOID/STARTER MOTOR | 12 DIPPER SWITCH | 22 L/H MAIN BEAM | 32 REAR NUMBER PLATE LIGHTS | 42 INTERIOR LIGHT SWITCH | 52 HAZARD FLASHER | 62 FUEL GAUGE |
| 3 IGNITION SWITCH | 13 MAIN BEAM WARNING LIGHT | 23 R/H MAIN BEAM | 33 L/H REVERSING LIGHT | 43 DOOR SWITCHES | 53 HEATER WARNING LIGHT | 63 TEMPERATURE SENDER |
| 4 CARBURETOR SWITCH | 14 ALTERNATOR | 24 R/H DIMMED HEADLIGHT | 34 L/H REAR LIGHT | 44 WINDSCREEN WIPER SWITCH | 54 WINDSCREEN WIPER MOTOR | 64 FUEL LEVEL SENDER |
| 5 CARBON CANISTER | 15 HANDBRAKE WARNING LIGHT | 25 FRONT R/H SIDE LIGHT | 35 L/H STOP LIGHT | 45 WINDSCREEN WASHER SWITCH | 55 WINDSCREEN WASHER MOTOR | 65 FAN RELAY |
| 6 COIL | 16 FUSE BOX | 26 FRONT R/H INDICATOR LIGHT | 36 REAR L/H INDICATOR LIGHT | 46 HRW & HEAT SWITCH | 56 HEATER MOTOR | 66 OTTER SWITCH |
| 7 BALLAST RESISTOR | 17 FLASHER UNIT | 27 REAR R/H SIDE LIGHT | 37 REAR L/H SIDE LIGHT | 47 LIGHTS SWITCH | 57 HEATED REAR WINDOW | 67 FAN |
| 8 TACHOMETER | 18 INDICATOR SWITCH | 28 REAR R/H INDICATOR LIGHT | 38 STOP LIGHT SWITCH | 48 PANEL LIGHT SWITCH | 58 SPEEDOMETER | 68 FAN |
| 9 CIGAR LIGHTER | 19 FRONT L/H INDICATOR LIGHT | 29 R/H STOP LIGHT | 39 REVERSE LIGHT SWITCH | 49 INDICATOR WARNING LIGHT | 59 BATTERY CONDITION INDICATOR | 69 HORNS |
| 10 HANDBRAKE SWITCH | 20 FRONT L/H SIDE LIGHT | 30 R/H REAR LIGHT | 40 BATTERY STABILISER | 50 HAZARD WARNING SWITCH | 60 TEMPERATURE GAUGE | 70 HORNS PUSHBUTTON |