



# SPARE PARTS MANUAL

ISSUED BY  
**TVR ENGINEERING LIMITED**  
**BLACKPOOL**  
**ENGLAND**

TELEPHONE 0253-56151

TELEGRAMS TEEVAR

## INTERPRETATION OF THE SPARE PARTS MANUAL

This Manual is divided into sections, as shown on the contents page

To locate a part refer to the contents page to establish the section and the appropriate page number of the list required. If the designation of the part is not known it may be identified by reference to the relevant illustration. The illustration item numbers are listed in numerical order in the tabulated list and the part number, description and number per car can be obtained by reading across the list.

Where the Manual refers to "Fixedback" this includes 1600M, 2500M and 3000M. When there is a difference between these models the model will be specified. Taimar and Convertible will be referred to by name. Parts peculiar to models fitted with the "Turbo" engine will be annotated accordingly.

Usage will quickly make the reader familiar with the manual layout and no problem should be encountered on locating any part number.

### HOW TO ORDER

In order to avoid delay the following information should be read carefully and the instructions followed closely to ensure that TVR Engineering Ltd. receives sufficient information, in the approved form, to enable a speedy despatch of the correct parts to be made.

Orders for parts should be forwarded separately from correspondence dealing with other matters.

#### Private Owners

All orders for replacement parts should preferably be placed with the nearest distributor or dealer and not ordered direct from the TVR Spares Department. For the convenience of dealers and private owners, however, over-the-counter cash purchases may be made at the factory.

#### Distributors

The address to which orders for parts should be sent is:-

TVR Engineering Limited,  
Spares Department,  
Bristol Avenue,  
BLACKPOOL,  
Lancs.,  
England.  
FY2 0JF

Telephone:- 0253 - 56151/2/3/4

Telex:- 67519

Telegrams:- Teevar

The chassis and engine numbers, including all letter prefixes and suffixes of the car concerned, must be quoted on every order. This information is given on the identification plate on the scuttle panel and the cylinder block respectively.

The full part number and description of the parts required must always be given and if any doubt exists a sketch or pattern should be forwarded with the order to assist in identification.

Specialist and other non-standard equipment which is not listed in this Parts Manual may be ordered on a separate order form giving full details. Chassis number and model are particularly important in these cases.

Damaged and broken parts sent as patterns will not be returned unless specially requested.

Shown below is a typical example of the information required:-

From: .....

1972 - 2500M

Chassis No. ....

Engine No. ....

Item 1	10016	Gear Lever	1 off
Item 2	15215	Vapour separator	2 off
Item 3	15527	Flange	1 off

Despatch to: .....

Address .....

Method of Transport .....

Signature .....

Date: .....



### **Special Note!**

As pipe and hose lengths may vary from time to time due to variations in Production Build, please state length required in addition to part No. in order that we may ensure supply of correct item.

Always specify the method of despatch required eg. Airmail, Air Freight, Sea, Post, Passenger Train, Goods Train, Road or own transport.

Confirmation orders must be clearly marked to avoid the possibility of duplication.

Crates and packing cases used for the despatch of goods will be charged for and credited in full if returned undamaged within one month.

### **Credit and Warranty Claims**

Items returned for credit must be accompanied by the Stores Requisition Note Number and the Invoice Number. These numbers can be obtained by reference to the original Invoice. Failure to supply this information can result in long delays in issuing credit, or even, credit can be refused.

### **Overseas Orders**

Full details of the required method of despatch and type of packing are particularly important when sending orders from overseas.

## CONTENTS

Page

<b>SECTION 1</b>	Engine fittings – 1600M (up to Chassis No. 3383)	1.3
	Engine fittings – 1600M (from Chassis No. 3384 to Chassis No. 3938)	1.5
	Engine fittings – 2500M (from Chassis No. 2240 to Chassis No. 4094)	1.9
	Engine fittings – 3000M, Taimar and Convertible	1.13
	Engine fittings – Turbo	1.17
<b>SECTION 2</b>	Exhaust and emission control – 2500M. Auto ignition vacuum pipes (up to 1974)	2.3
	Exhaust and emission control – 2500M. Emission and vacuum pipes (from 1975/76)	2.5
	Fuel System	2.7
	Fuel System piping at tank (from 1975/76) 1600M, 3000M, Taimar and Convertible	2.9
	Fuel System piping at tank (from 1975/76) 2500M	2.11
	Exhaust system – 1600M	2.13
	Exhaust system – 2500M	2.15
	Exhaust system – 3000M, Taimar and Convertible	2.17
	Exhaust system – Turbo	2.19
	Cooling system – 1600M (up to Chassis No. 3383)	2.21
	Cooling system – 1600M (up to 1974)	2.23
	Cooling system – 1600M (from 1975/6)	2.27
	Cooling system – 2500M (up to Chassis No. 2591)	2.29
	Cooling system – 2500M (from Chassis No. 2592 to Chassis No. 2803)	2.29
	Cooling system – 2500M (from Chassis No. 2804)	2.31
	Cooling system – 3000M (up to Chassis No. 2617)	2.33
	Cooling system – 3000M (from Chassis No. 2618 to Chassis No. 3038)	2.35
	Cooling system – 3000M (from Chassis No. 3039 to Chassis No. 4569 Taimar to Chassis No. 4424, Convertible to Chassis No. 4583)	2.37
	Cooling system – Large radiator (300M from Chassis No. 4570, Taimar from Chassis No. 4425, Convertible from Chassis No. 4584)	2.39
	Heater Assembly (up to 1975)	2.41
	Heater Assembly (from 1975/76)	2.43
	Heating and ventilation system – Taimar and Convertible	2.45
	Electric fan assembly	2.47
<b>SECTION 3</b>	Differential and axle assembly – 1600M	3.3
	Differential carrier - 1600M	3.9
	Differential and axle assembly – 2500M and 3000M	3.11
	Salisbury differential (from Chassis No. 3919)	3.17
	Propellor shaft assembly	3.19
	Hydraulic clutch – 2500M	3.21
	Mechanical clutch pedal assembly – 1600M, 3000M, Taimar and Convertible	3.23
<b>SECTION 4</b>	Front suspension	4.3
	Anti-roll bar	4.7
	Steering column	4.9

<b>SECTION 5</b>	Brake piping (up to Chassis No. 3277)	5.3
	Brake piping (from Chassis No. 3278)	5.5
	Brake piping (from Chassis No. 3459)	5.7
	Brake, clutch and accelerator pedal assembly	5.9
	Brake servo assembly	5.11
	Handbrake assembly	5.13
	Brakes -- front and rear	5.15
<b>SECTION 6</b>	Instruments and dashboard -- 1600M and 2500M -- RH Drive (up to Chassis No. 3502)	6.3
	Instruments and dashboard -- 2500M and 3000M -- LH Drive (up to Chassis No. 3502)	6.5
	Instruments and dashboard -- 3000M -- RH Drive (up to Chassis No. 3502)	6.7
	Instruments and dashboard -- 1600M, 2500M and 3000M -- RH Drive (from Chassis No. 3503)	6.9
	Instruments and dashboard -- 2500M and 3000M -- LH Drive (from Chassis No. 3503)	6.11
	Instruments and dashboard -- Taimar	6.13
	Instruments and dashboard -- Convertible	6.17
	Crash pad, console and main switch panel	6.19
	Electrical equipment	6.23
	Lights	6.31
	Lights (latest versions)	6.35
	Windscreen wipers and washers	6.39
<b>SECTION 7</b>	Chassis	7.3
	Body	7.5
	Body -- small panels	7.7
	Door and window assembly (except Convertible)	7.11
	Door assembly (Convertible)	7.17
	Body fittings (Interior)	7.21
	Body fittings (Exterior)	7.25
	Body fittings (Convertible)	7.29
	Carpets and fittings (up to Chassis No. 2954)	7.33
	Carpets and fittings (from Chassis No. 2955)	7.35
	Carpets (from 1975/76)	7.41
	Carpets Taimar (from Chassis No. 3837) Convertible (from Chassis No. 4408)	7.43
	Seats	7.47
<b>SECTION 8</b>	Sunshine roof and hood (Convertible)	8.3